
Now that you have bought a Doulton drinking water filter you have taken the first step towards protecting you and or your family from the dangers of water-borne contaminants.

IP100,200,300 & HIS Installation Instructions

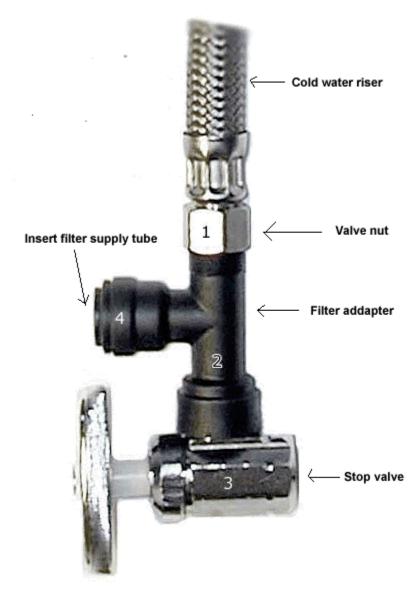

Water connection

Using JG/M tee is very simple, no plumbing knowledge required. Simply shut your cold-water valve (3), remove the 3/8 in. faucet riser nut (1), screw JG/M (2) onto the valve then reattach the riser to the tee. The supplied drinking water system tube is simply pushed into the tee outlet (4). This is your raw water supply that goes to the back end of the filter arrow.

Faucet installation

Faucet installation: <u>On stainless steel sink</u>; drill 1/2 inch hole on the ledge of the sink using steel drill bit. <u>On porcelain steel sink</u>; drill 1/8 inch pilot hole with a steel drill bit, finish drilling with 1/2 inch steel drill bit at a low speed. Apply masking tape onto the area you are drilling on porcelain steel sinks to avoid enamel chipping. <u>For cast iron and</u> <u>vitreous china sinks contact your local plumber or</u> <u>plumbing supply for further instructions.</u>

Filter installation

Unscrew the body from the head. REMOVE THE CERAMIC CANDLE FROM ITS PROTECTIVE SLEEVE.

Install filter bracket using 2 large screws on a convenient position and line up the filter on the sink base cabinet wall. Screw in 2 small screws onto the wall of the cabinet half way through. Insert tubing into the filter on front end of the arrow 3/4 of an inch. The other end of the tube is then inserted into the speed-fit connector of the "Pure Water Tap". Open Pure Water Tap and let the initial water flow to waste for about 2-3 minutes.

SERVICING THE WATER FILTER


Cleaning, removal and replacement of the ceramic candle is carried out as follows: Shut the cold-water valve. Unscrew the body, which will be full of water, from the head. The candle can now be unscrewed from the head and cleaned with scouring pad or stiff nylon brush under cold running water. NEVER USE STEEL WOOL OR DETERGENTS. The housing can be washed with dishwashing soaps followed by a thorough rinse.

If normal use of the filter is interrupted by holidays or vacations, the first quart/liter of water may have "flat" or "stale" taste. Flushing the system for several minutes after any prolonged period of inactivity will eliminate this problem.

REFRIGERATOR AND OR ICE MAKER INSTALLATIONS

Your Doulton water filter can also be diverted to your chilled water and or icemaker dispenser. To do so you need to cut the pure water tubing, install our speed-fit tee and connect your tubing. The 3/8x3/8x1/4 speed-fit tee can be purchased from us for additional \$5.95.

Should you ever need to remove the tubing out of the speed fittings, simply press and hold the gray ring of the fitting while pulling the tubing. Please remember to cut the end of the tube before reinserting.

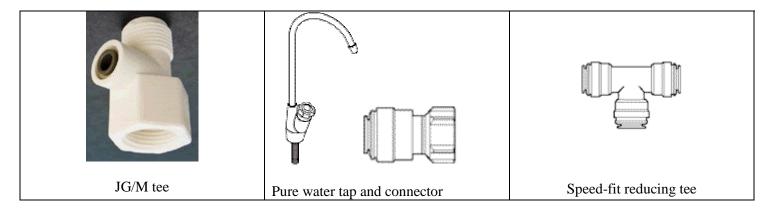

Should you have difficulty or questions about the installations please do not hesitate to call us at (toll free) 1 888-664-3336 in US and Canada, 248-258-5500 international.

Thank you for purchasing Doulton water filter and enjoy pure water for years to come as millions of individuals enjoying it in over 150 countries worldwide.

NOTE: All Doulton water filters carry a lifetime* warrantee with the exception of the replacement candle(s). Should any of the components fail give us a call and we'll ship you new component at no charge. The candles should be changed every 6 months to a year on a typical household use.

* For Doulton water filters members only. Each customer who purchases a Doulton drinking water system from our company is an automatic member.