

5. Ensure that the available power supply matches the cooler's electrical specifications indicated on the nameplate label (located at the rear). Plug power supply cord into receptacle. It is recommended that the unit is supplied by a dedicated 15A Breaker or as required by local electrical codes. (Use of an extension cable will invalidate the warranty.)
6. Water should not be drawn from the cooler for at least 30 minutes to allow time for water to chill. Optimum water temperature will be reached after several hours of operation.
7. Ensure the following when cooler is to be serviced or cleaned:
 - 7.1. Turn off the electrical supply and disconnect the power cord.
 - 7.2. Close the shut-off valve on isolating or saddle valve, or shut off water supply to cooler if the saddle valve used does not incorporate shut-off valve.
 - 7.3. Release the pressure from the water system by opening the water faucet.
 - 7.4. Undo the drain cap in the front of the cooler, and completely drain all the water from the reservoir into a bucket for disposal. Replace the drain cap. (Before the water cooler is returned to normal use, flush the reservoir thoroughly with clean, fresh potable water.)

CLEANING

Do Not Immerse the Unit in Water for Cleaning

External: Use only a mild liquid detergent or suitable cleaning product, and soft cloth for cleaning the exterior surfaces. DO NOT USE bleach or abrasive cleaners. Use a vacuum cleaner to remove dirt and lint from the condenser. The outer surfaces of this unit should be cleaned every 3 months.

Internal:

- 1.1 Follow the instructions described in 7.1, 7.2, and 7.3.
- 1.2 Disconnect the water line from the "Water Inlet" point. Undo the drain cap and completely drain all the water from the reservoir into a bucket for disposal. Leaving the faucet valve open will speed up this operation. Replace the cap. Disconnect filters and other devices so water line is clear to the reservoir.
- 1.3 Using the water line removed from the "Water Inlet", fill the reservoir with a recommended food-grade sanitising solution. (Please note that the solution should not be passed through any filters or associated equipment in the system - these should be disconnected prior to the solution being poured into the system. As per 1.2.)
- 1.4 Allow the solution to remain in the system as recommended by the sanitising product manufacturer. Remove the drain cap and drain all contents into a bucket for disposal.
- 1.5 Reconnect the water inlet tubing and partially turn on the water supply allowing clean fresh water to flow through the unit into a bucket. Repeat this step at least 3 times to remove all traces of sanitising solution.
- 1.6 Turn off the water supply to the unit and replace the drain cap.
- 1.7 Complete the reconnection of the water system, including any previously disconnected devices (in 1.3 above).
- 1.8 Turn on the water supply and allow water to flow uninterrupted through faucet for at least 3 minutes into the sink to ensure total flushing of the system.
- 1.9 Dry off any water spillage from the vicinity of the water cooler.
- 1.10 Reconnect the electrical supply and switch on the unit to return to normal usage.

CAUTION! ALWAYS DRAIN WATER COMPLETELY BEFORE SHIPPING OR STORING THE WATER COOLER

The customer acknowledges that water, like other liquids, can cause damage to surfaces. The customer takes full responsibility for placing the cooler within a residence or business, and acknowledges that failure to address drips, leaks or spillages is at the customer's own risk.

WARNING


The warranty and Canadian Standards Association, Underwriters' Laboratory and CE Listings for the cooler are invalidated if any alteration, modification, or use or misuse in combination with any other machine or devices is deemed to be the source of any claim.

The manufacture accepts no liability (including bodily injury) resulting from any alteration, misuse, neglect, accident, improper installation or repair.

This unit is rated IPX0 (This unit is not protected against ingress of water).

Use with caution only. Children must not be left unsupervised near the cooler.

Environmental application temperature: 10~32°C.

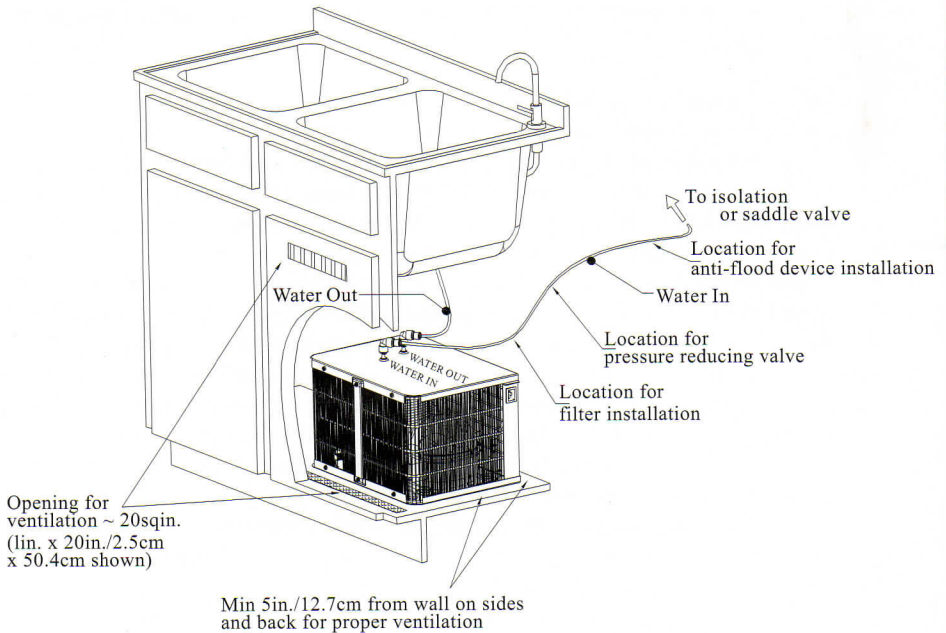

<Fig.1>